

Roller Shutter Installation Instruction












For Mitsubishi Triton 2015+



Before Installation


Please read the instruction completely before installation, which will also help you to avoid scratches or other potential damages to your vehicle. The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly.

PART LIST

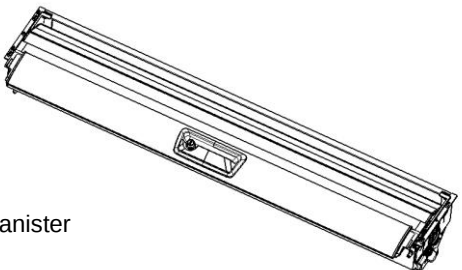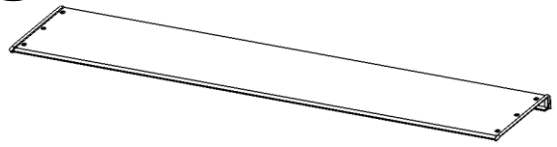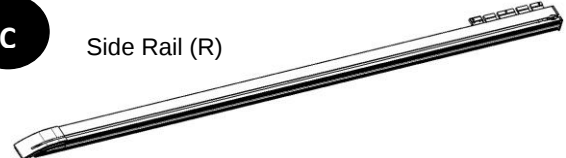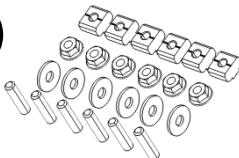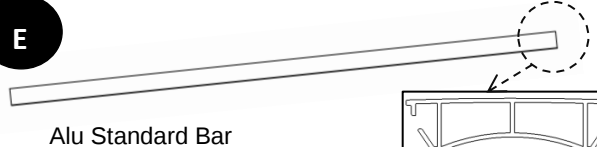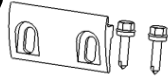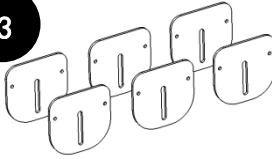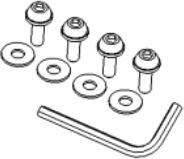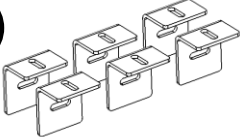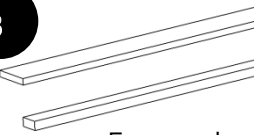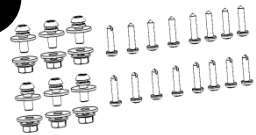
A  Canister	B Side Rail (L) 
D  Cover Plate	C Side Rail (R) 
1  Accessories for brackets	E  Alu Standard Bar
2  Bracket for tailgate lock	F  Front Square Bar
5  Accessories for cover plate	3  Bracket 1 for side rails
9  Positioning rubber foam (Tailgate)	4  Bolts for side rails
6  Rear Drain-tube	7  Front Drain-tube
10  Bracket 1 for side rails	8  Foam seal
11  Accessories for brackets	



Tools and materials needed

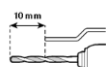


Ø 3,5 mm
Ø 30 mm

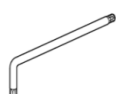


T15, T30





Installation Steps

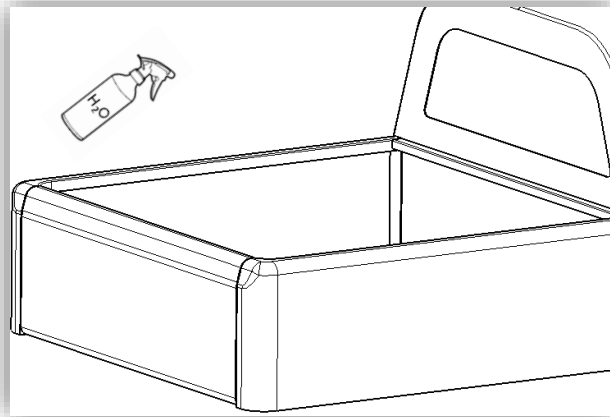


1. Cleaning the load bed rails.

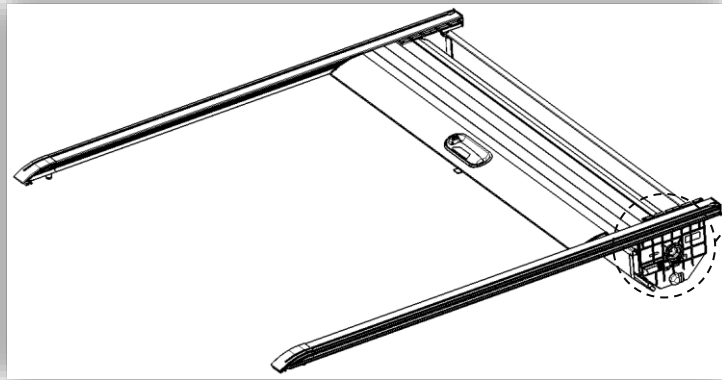



2. Install ②\③ side rails on ① canister with ④ M6_12 bolt combo.

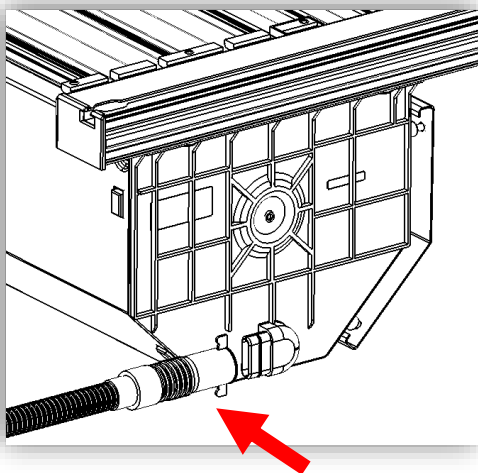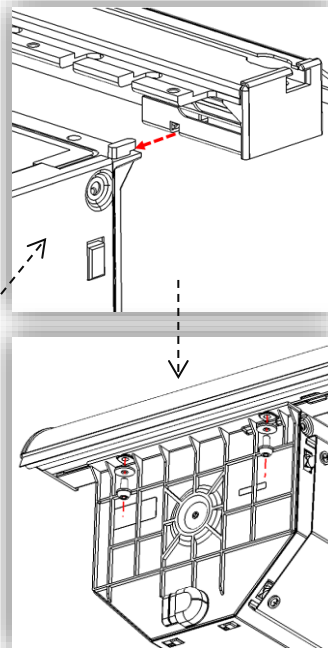


3. Install the ⑦ drain-tube on canister, assembly way is same on both sides.

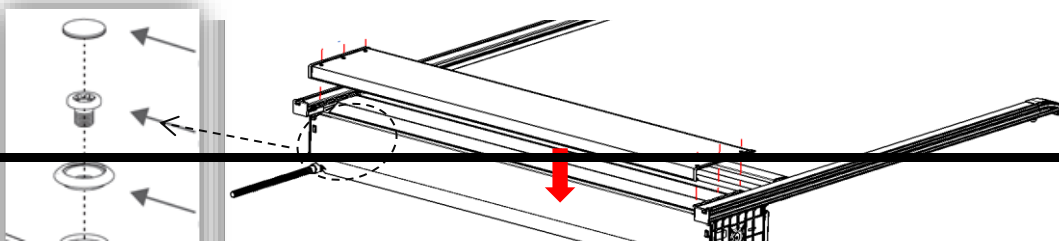


4. Place ④ cover plate on canister, fasten it with the side rails with ⑤ M5_6 bolt combo.

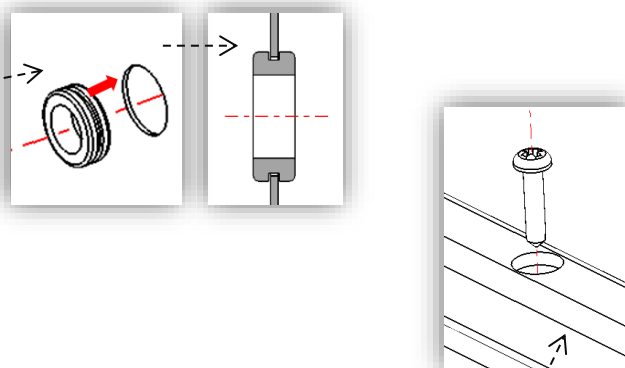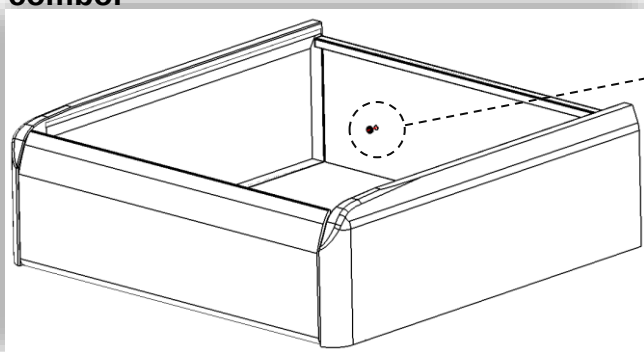


5. Find the two holes on the front of the truck bed, and then install the grommet ⑦ on it. Both sides should be same.

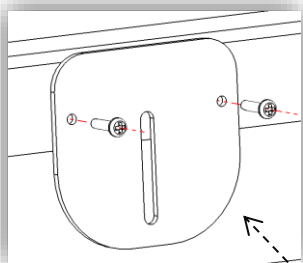


Front square bar

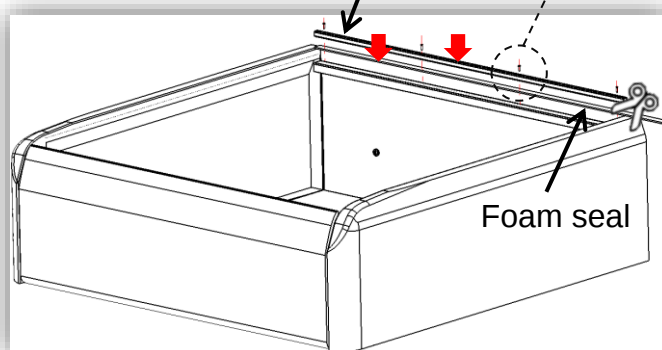


6. Install the bulkhead seal ⑧ and trim it at the corner part to match the side rails. Install the ⑥ front square tube with ⑪ self-tapping screws.


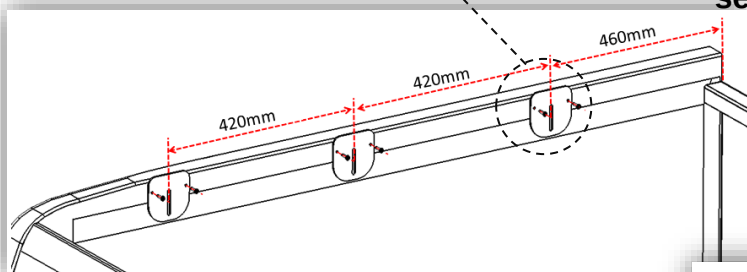


7. Drilling holes to install ③ bracket 1, and fasten it with ⑪. Bracket 1 should be 3 pieces on each side.


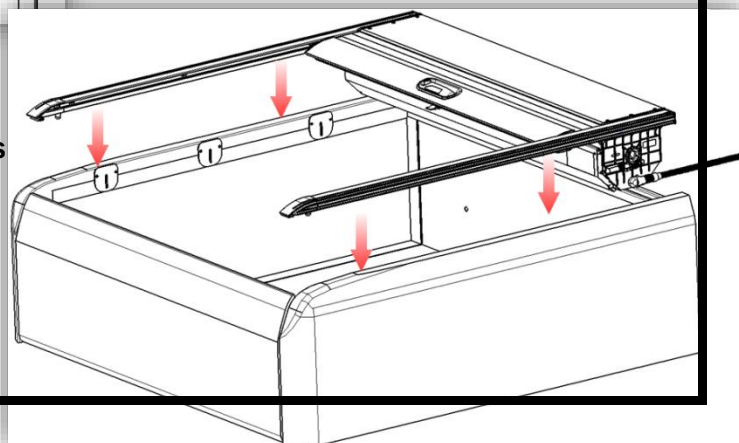


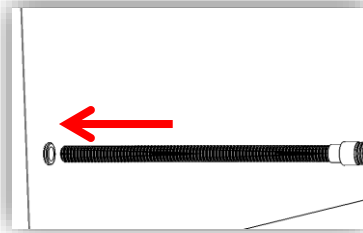



8. Put the roller shutter on truck bed, thread the front drain-tube to the truck bed.

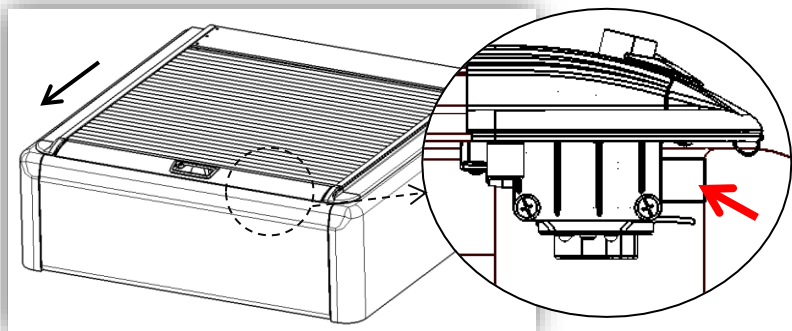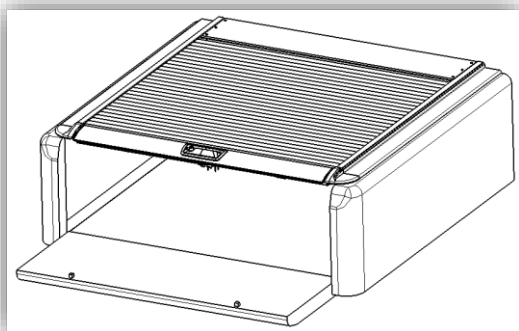



9. Put the rubber foam ⑨ on the tailgate, as the photo shows above. Close the roller lid and pull it backwards until it touch the rubber foam.

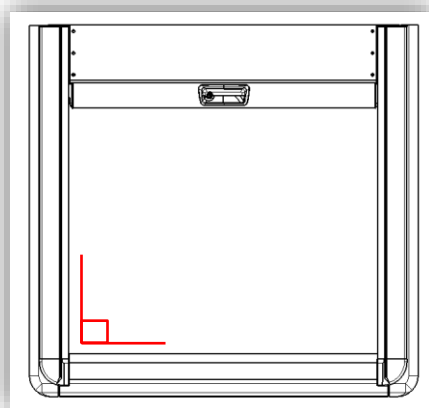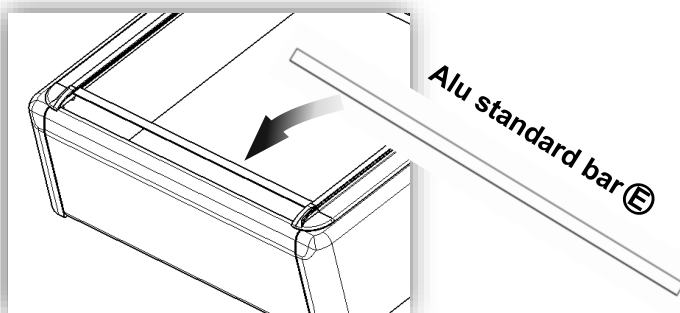

10. Open the roller lid and put the standard bar to adjust the width between two side rails. Distance between the side rails should be same from front to rear part.

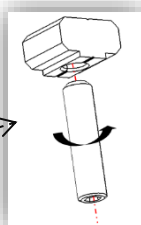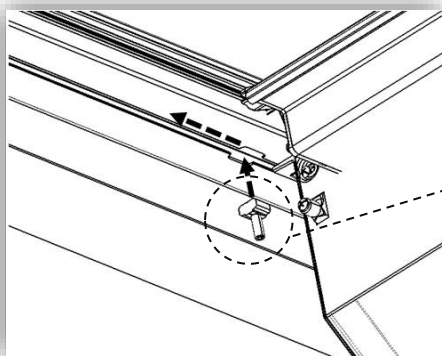


11. As the figure shows, ① M6 bolt screwed into M6 square nut. Then put the bolts into the side rails, 3 pieces on each side.


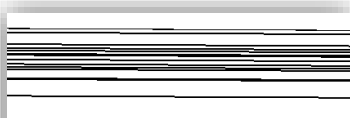
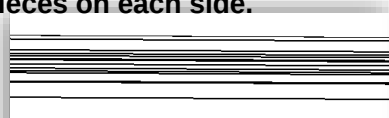





12. Install ⑩ bracket 2 with ① & ⑪. (As the photo shows above)

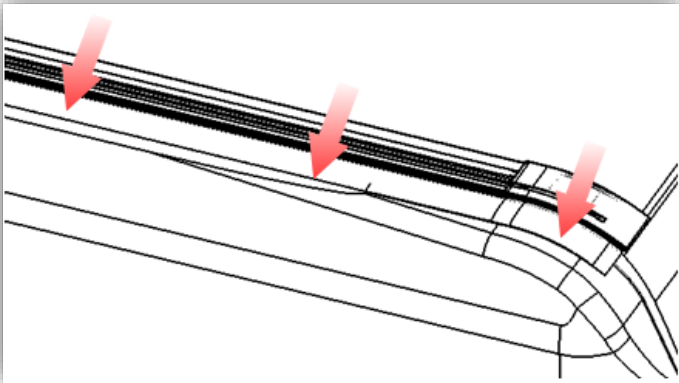

13. Peel off the protective film on 3M tape, which is on bottom part of the side rubber strip. Apply downward pressure to the side rubber strip, ensure it can stick well on truck bed.

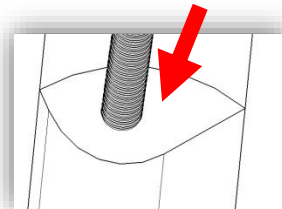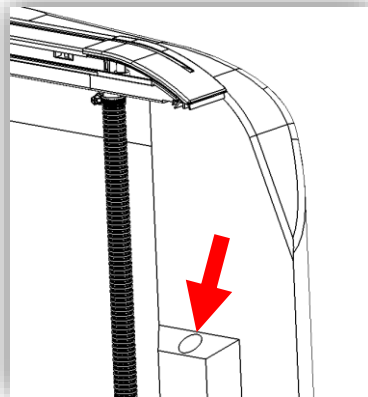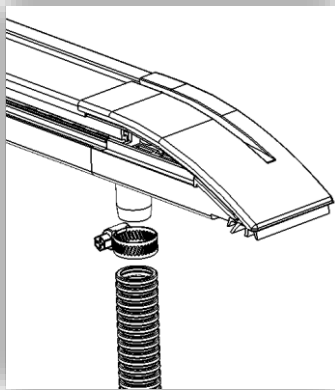

14. Install the rear ⑥ drain-tube on the truck bed. (Both sides should be same)

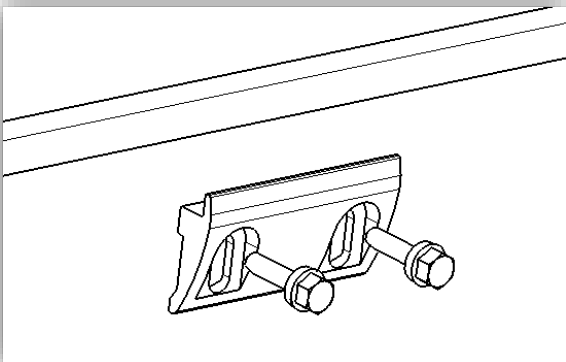

15. As the figure shows, install ② on tailgate door. Instruction details could be referring to the last page.

16. If the roller shutter do not runs smoothly, you can follow below steps: (as the picture shows)

a. Put some lubricating oil on slot part of side rails.

b. Adjust the spring. (Clockwise Tighten; Counterclockwise Loosen)

