

INSTALLATION INSTRUCTIONS

PART# PW034812

SLIDE TRAY INSTALATION INSTRUCTION





Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


Parts list

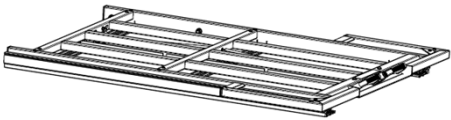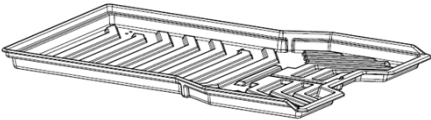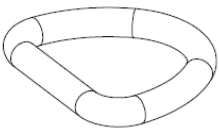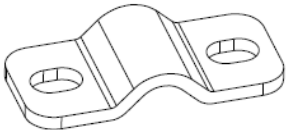NO.	QTY	NAME	NO.	QTY	NAME
①	1	 BASE OF SLIDE TRAY	②	1	 SLIDE TRAY PLATE
③	6	 TYPE D BUCKLE	④	6	 BRACKET FOR TYPE BUCKLE
Hardware list:					
⑤	4	HEX BOLT M10_65	⑥	8	EXTRA-SIZE WASHER D12
⑦	4	SPRING WASHER D10	⑧	4	NUT M10
⑨	12	HEX BOLT M6_25	⑩	12	SPRING WASHER D6
⑪	12	LARGE WASHER D6			


INSTALLATION INSTRUCTIONS

Installation Steps

Installation Fig.

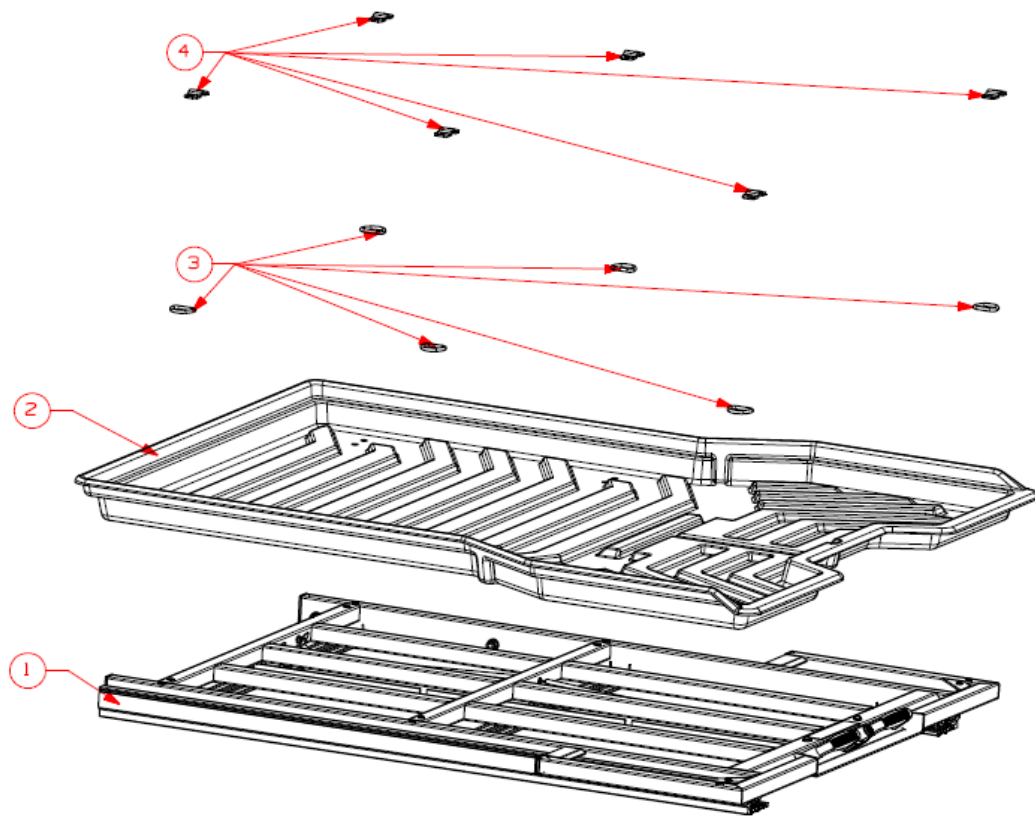


Step 1: Put the base and plate of slide tray on the truck bed, adjust it to appropriate position.

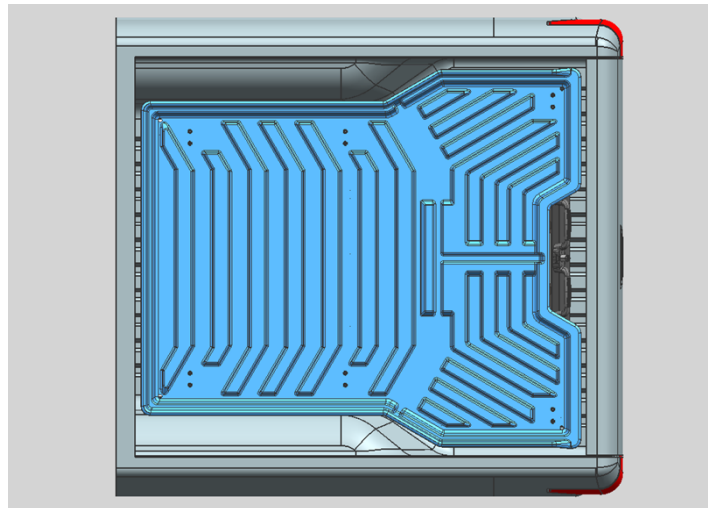


INSTALLATION INSTRUCTIONS

Step 2: Remove the plate of slide tray, then drill 4 holes (ø12mm) on the Aluminum base, as the figure shows below. Holes on each side should be kept in same distance.

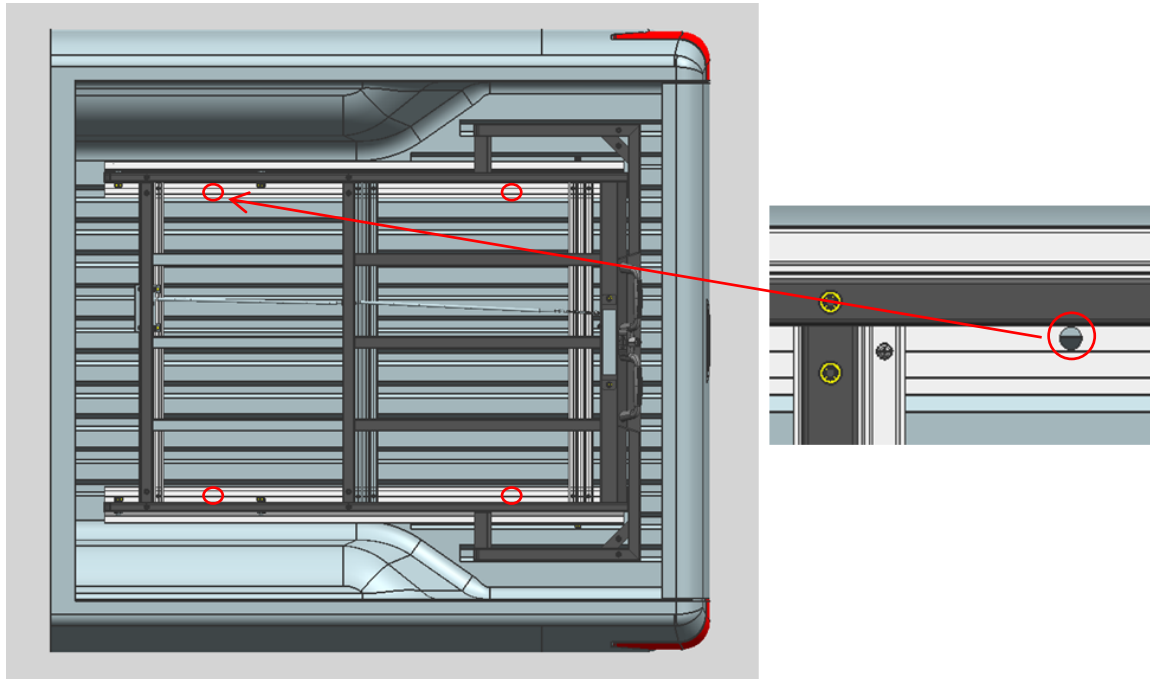


Step 3: Install the base ① of slide tray with hardware ⑤⑥⑦⑧.

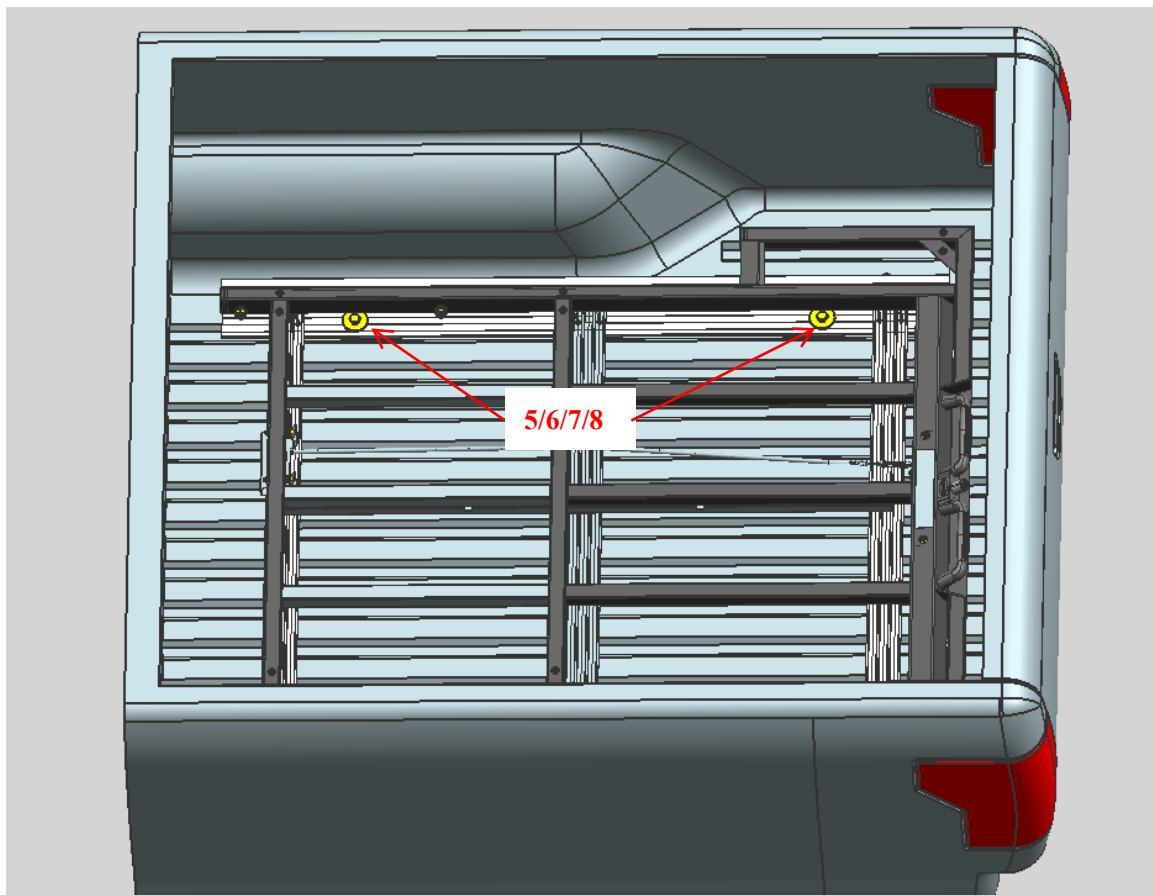

INSTALLATION INSTRUCTIONS

Step 4: Install the Type D buckle set (3)&(4) on plate (2) with hardware (9)(10)(11). (3 sets on each side)

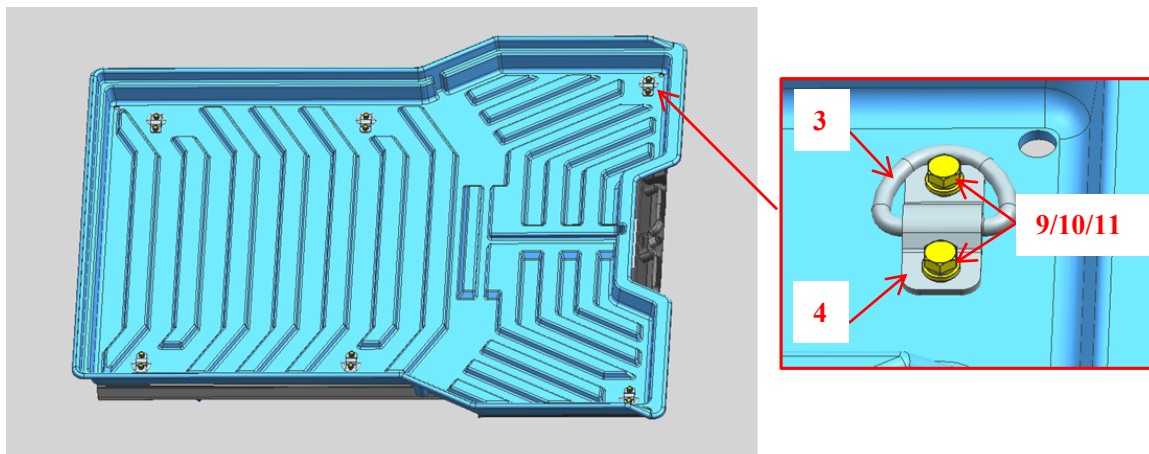

Step 5: Test and make sure that the guard is steadily fixed, fully tighten all hardware.

Step 6: Installation is finished, pick up all tools.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.