PART# PW036780

ALUMINUM SLIDE TRAY FOR HILUX REVO 2015+/NAVARA NP300 2015+/FORD RANGER 2012+/ISUZU DMAX 2012+/Triton 2015+ / VW AMAROK 2010+

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you
 received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


Parts list

NO.	QTY	NAME	NO.	QTY	NAME
1	1				
		SLIDE TRAY			
Hardware list:					
2	4	Hex bolt M10_65	3	8	Large washer D12
4	4	Spring washer D10	5	4	Nut M10
6	4	φ 16×12 Pastic washer			

Installation Steps


Installation Fig.

Step 1: Put the slide tray on the truck bed, adjust the base of slide tray to appropriate position;

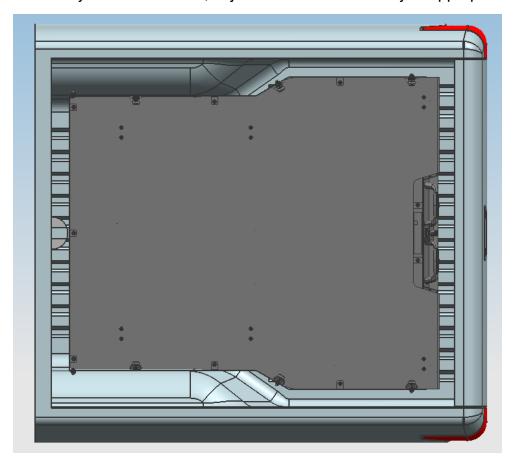


Step 2: After adjusted the position, remove the plate from the base according to the following steps.


INSTALLATION INSTRUCTIONS Press the button and pull the plate close to the tail. Lift up Press and hold the button to lift the plate from the base hole.

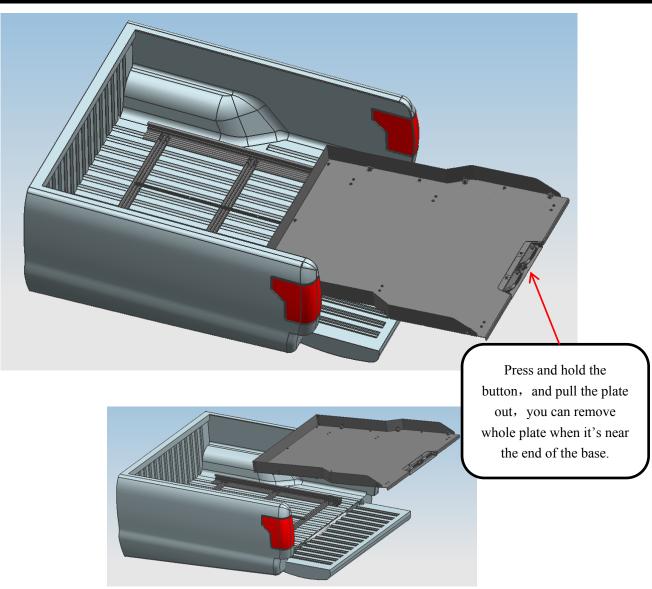

Step 3: Drill 4 holds (ø12mm) on the aluminum base, as figure shown below. Holds on each side should be kept in the same distance;

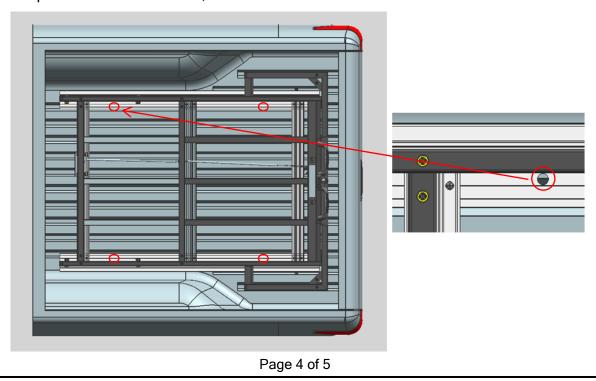

Step 3: Install the base of slide tray 1 on the truck bed with hardware 23456

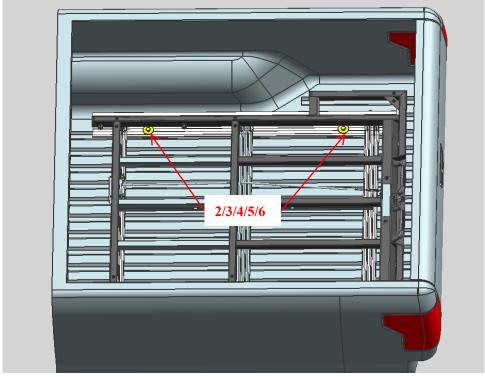

- Step 4: Install the plate on the base according to the remove method.
- Step 5: Test and make sure that the slide tray is steadily fixed, fully tighten all hardware.
- Step 6: Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.