


REAR CASE BRACKET


RANGER 23+




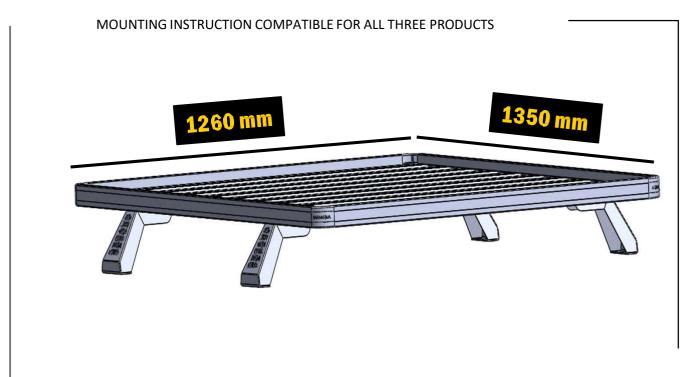



*VERIFY YOU HAVE ALL THE COMPONENTS BEFORE STARTING THE INSTALLATION.
REFER TO THE ENGINEERING DRAWINGS AT THE END OF THIS DOCUMENT FOR A COMPLETE PARTS LIST*




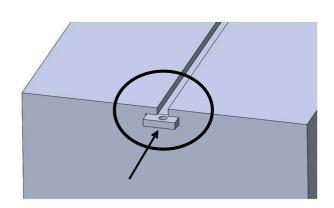

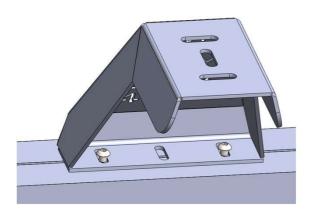

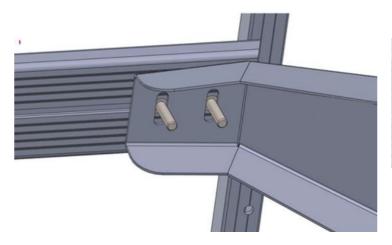

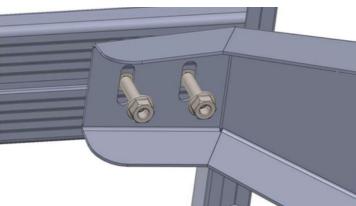

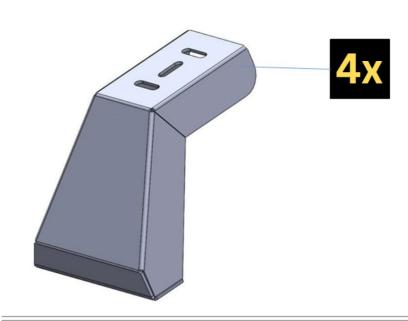













3. Bolt Kit

| Designation | Part No | Name | Spec. | Q'ty |
|-------------|---------|-------|------------------|-------|
| | | Bolts | DIN 6921 (M8X16) | 8 PCS |
| | | Nuts | DIN 6923 M8 | 8 PCS |
| | | Bolts | DIN 6921 (M6X12) | 8 PCS |
| | | Nuts | M6 | 8 PCS |
| | | | | |