

Roller Shutter Installation Instruction

For Ford Ranger Wildtrak 2012+
















Before Installation

Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your vehicle.



The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly.

PART LIST

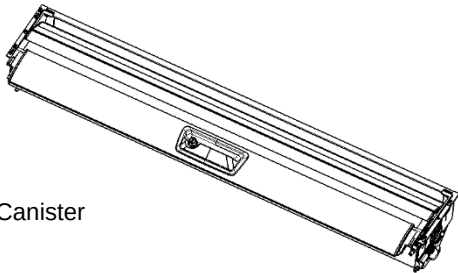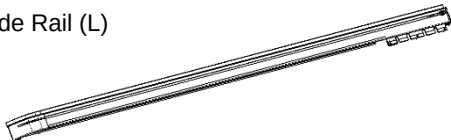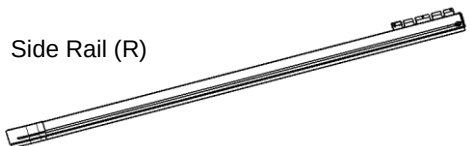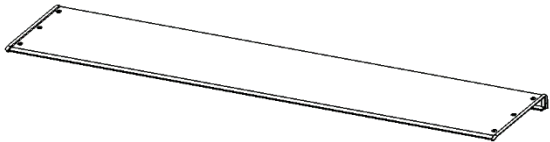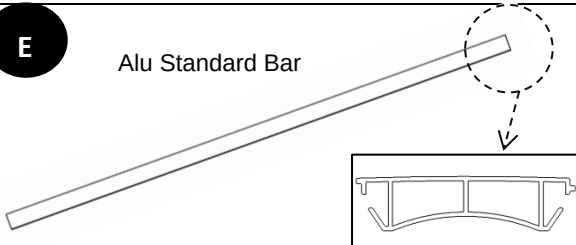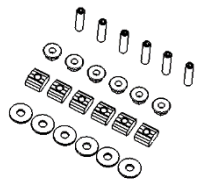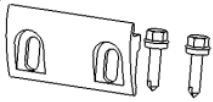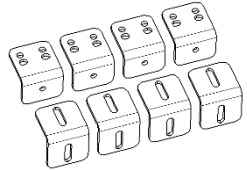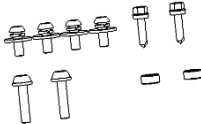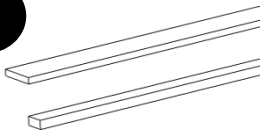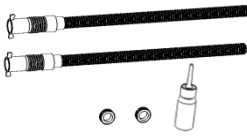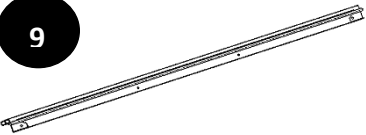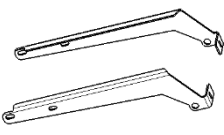
A  Canister	B  Side Rail (L)		
	C  Side Rail (R)		
D  Cover Plate	E  Alu Standard Bar		
1  Accessories for brackets	2  Bracket for tailgate lock	3  Bolts for side rails	4  Accessories for cover plate
5  Brackets for side rails	6  Accessories for brackets	7  Foam seal	8  Front Drain-tube
9  Alu L-shaped front bar	10  Positioning rubber foam (Tailgate)	11  Rear long bracket	12  Rear Drain-tube



Tools and materials needed

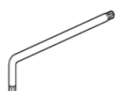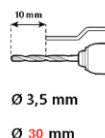


T15, T30

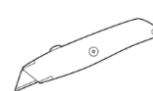


Installation Steps


1. Cleaning the load bed rails.

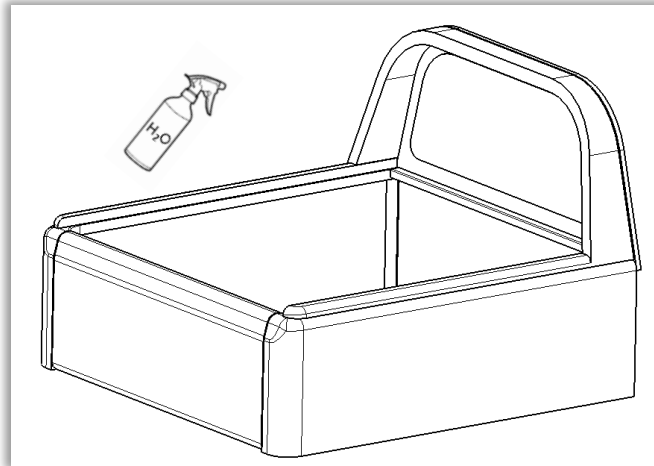


2. Remove the bolts on front of the OE roll bar.

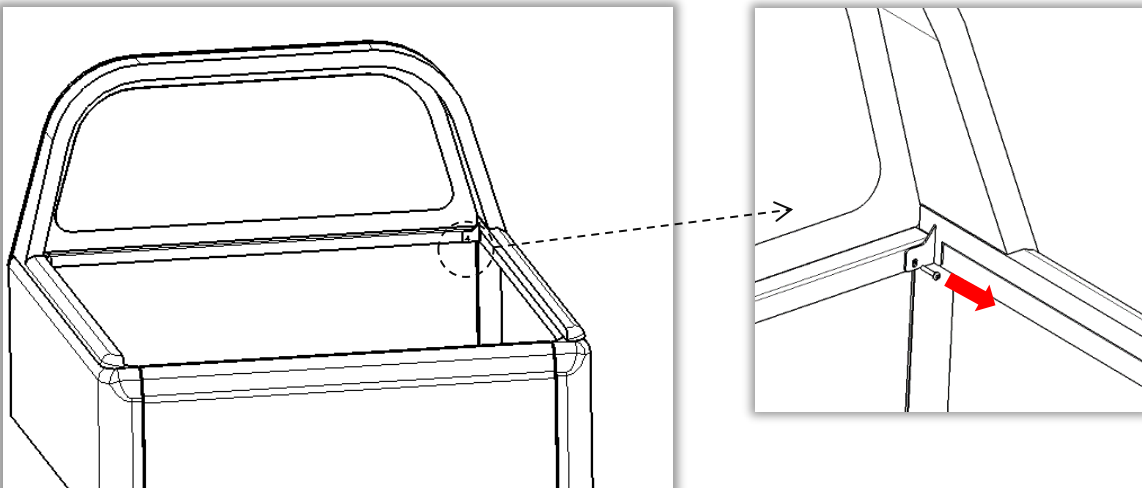


3. Install the ⑨ Alu L-shaped front bar on truck bed, fasten it with ⑥.

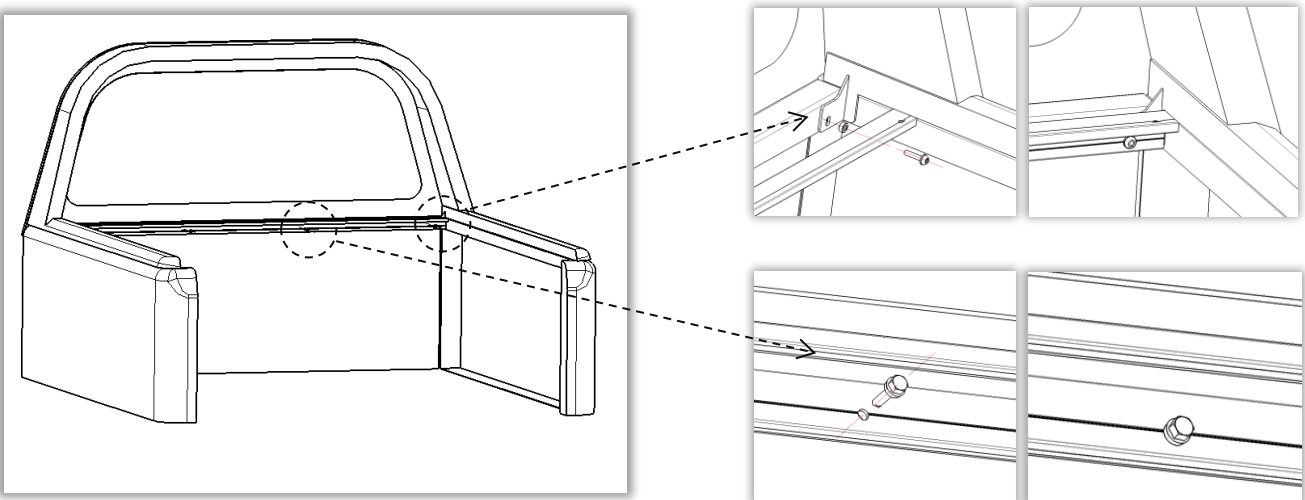


4. Install ②\③ side rails on ① canister with ④ M6_12 bolt combo.

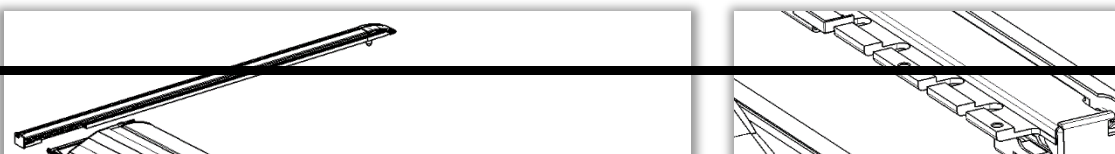


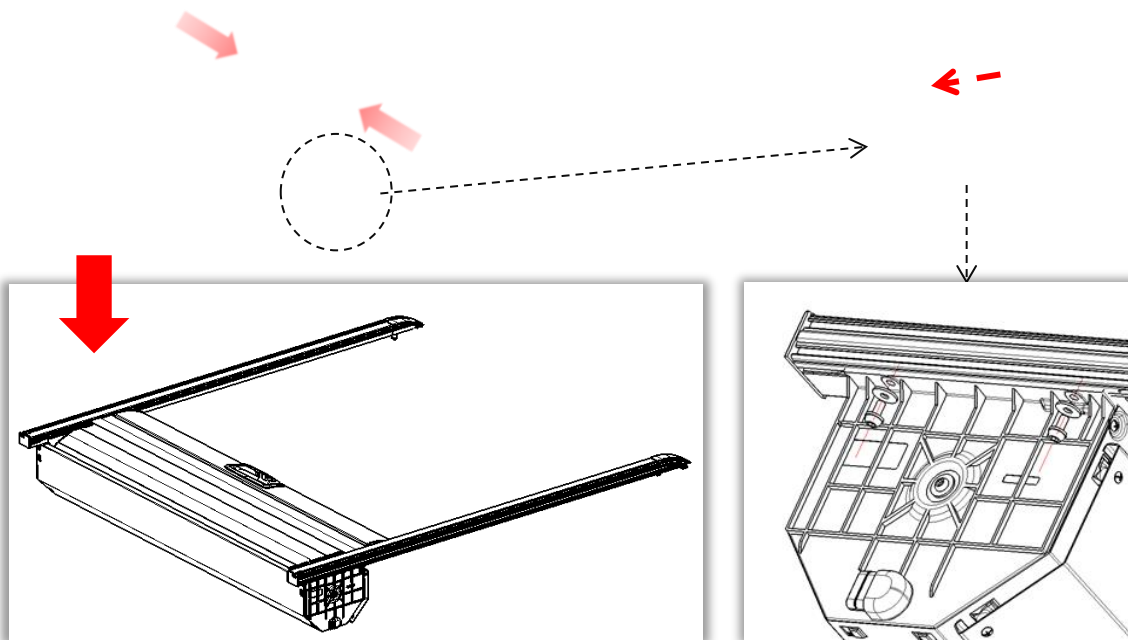




5. Install the ⑧ drain-tube on canister, assembly way is same on both sides.

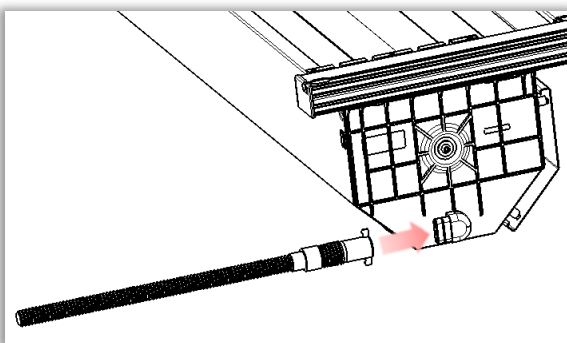


6. Place ④ cover plate on canister, fasten it with the side rails with ④ M5_6 bolt combo.


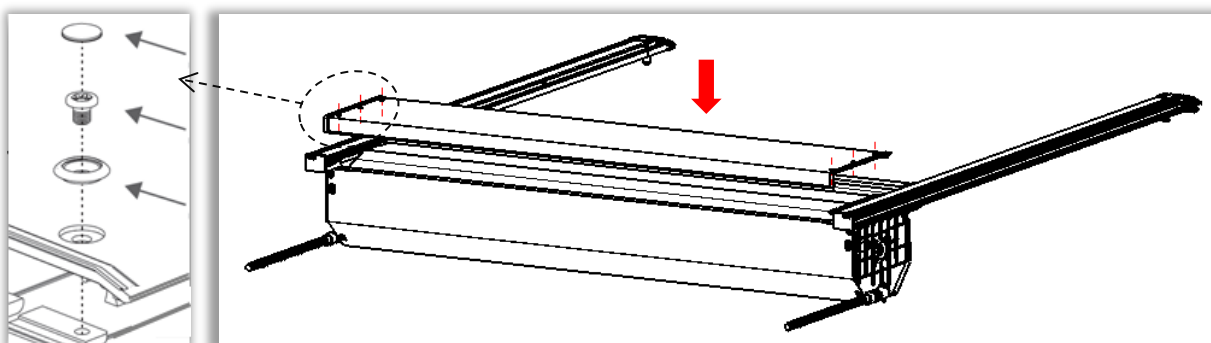


7. Find the two holes on the front of the truck bed, and then install the grommet ⑧ on it. Both sides should be same.

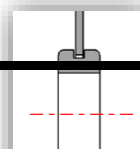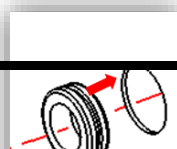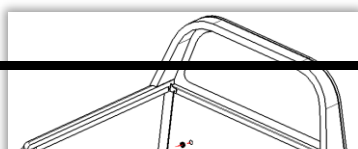



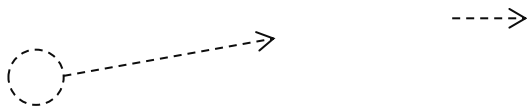


8. Place the roller shutter on truck bed, thread the front drain-tube to the truck bed.


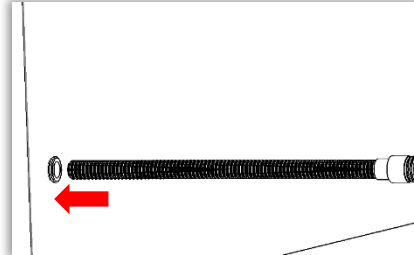
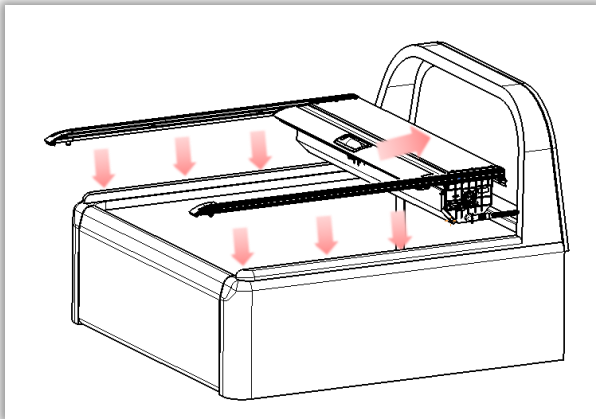


9. Adjust the side rail to appropriate position. (Rear rubber on side rail should slightly touch the tailgate)


Install the ⑪ rear long bracket with OE bolt.

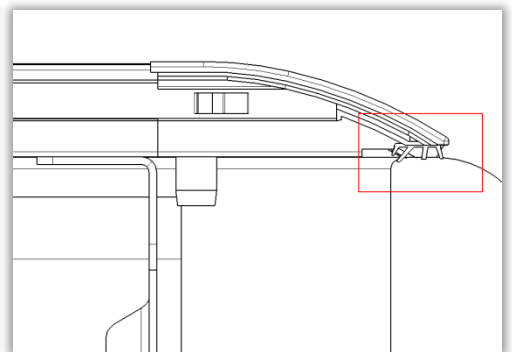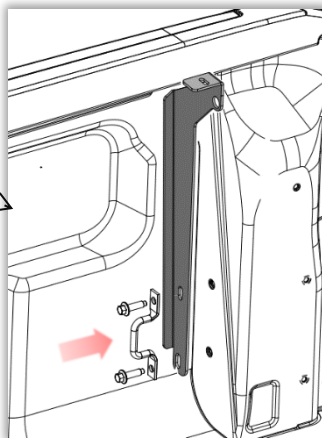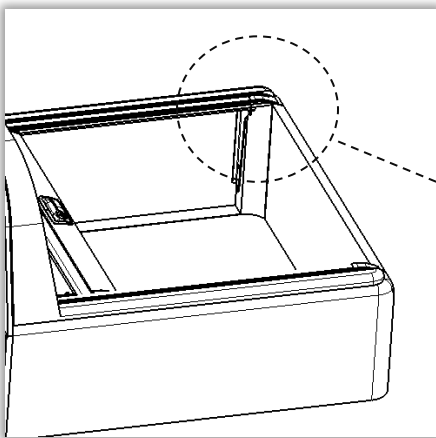


10. Put the rubber foam ⑩ on the tailgate, as the photo shows above. Close the roller lid and pull it backwards until it touch the rubber foam.

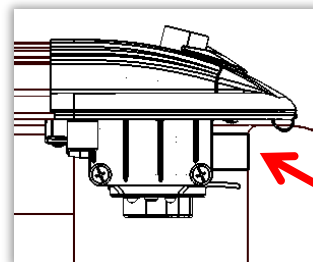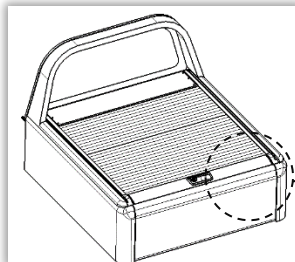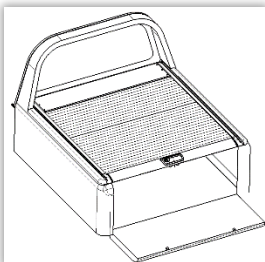



11. Open the roller lid and put the ⑤ standard bar to adjust the width between two side rails. Distance between the side rails should be same from front to rear part.

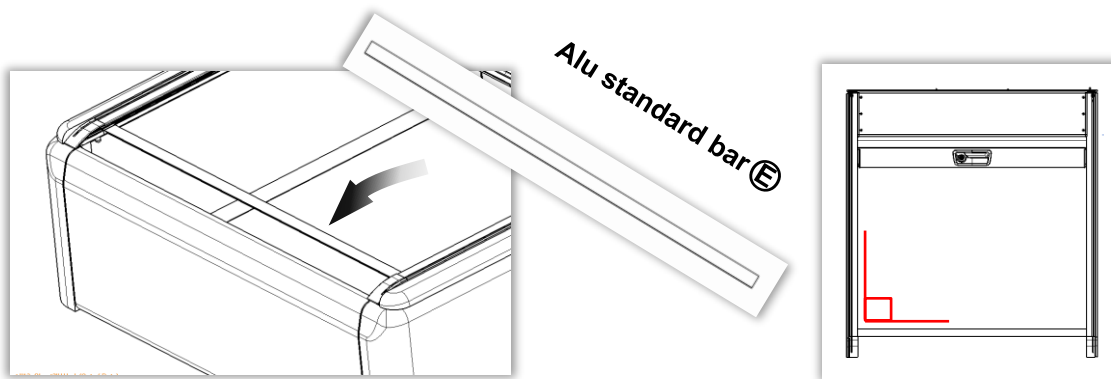


12. As the figure shows, ① M6 bolt screwed into M6 square nut. Then put the bolts into the side rails, 3 pieces on each side.

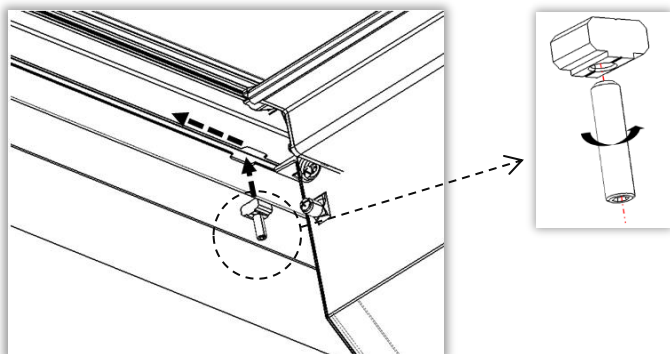


13. Slide the ① T-nut and bolts on bottom of side rail. (To fasten the brackets with side rails)

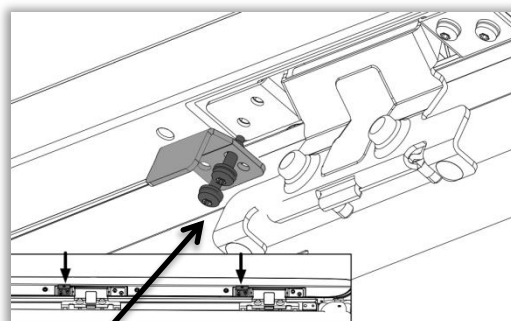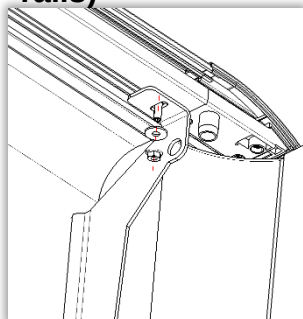


14. Fasten ⑤ bracket 1 on OE roll bar, fasten it with OE bolts.

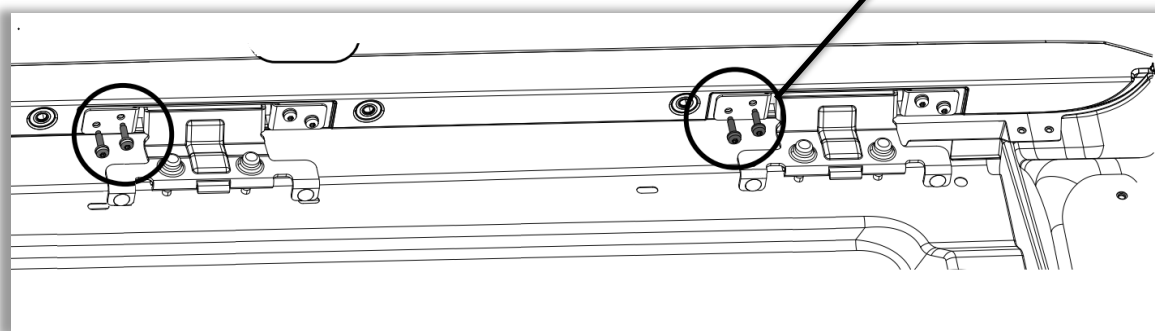


15. Install ⑤ bracket 2 on side rail, fasten it with ①. Fasten ⑤ bracket 1 & bracket 2 with ⑥ bolt combo.

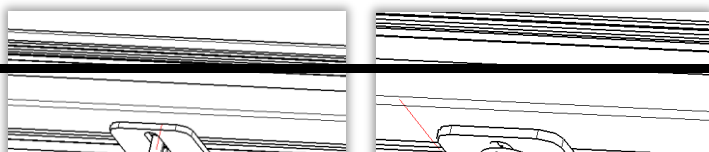


16. Install the drain-tube ⑫ at the rear part of the side rail. (Both sides should be same)

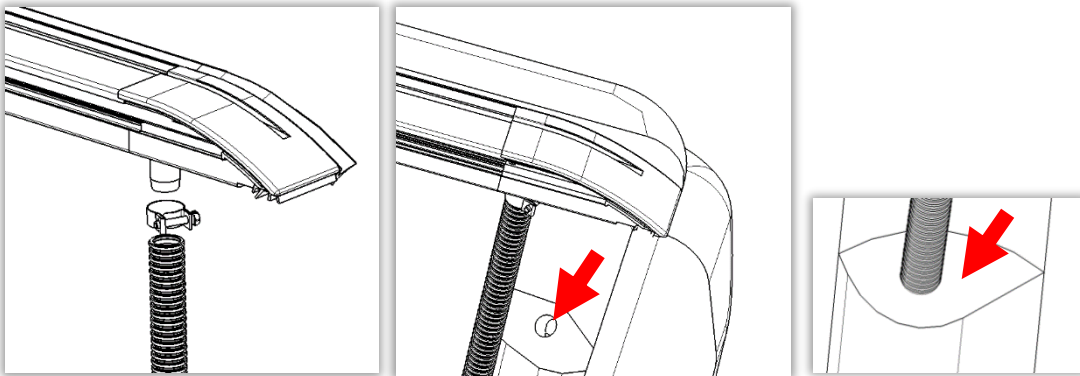

17. Put the rubber plug on front of the side rails.

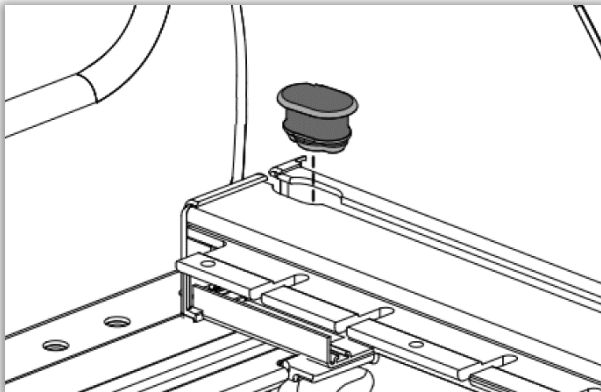

18. As the figure shows, install ② on tailgate door. Instruction details could be referring to the last page.

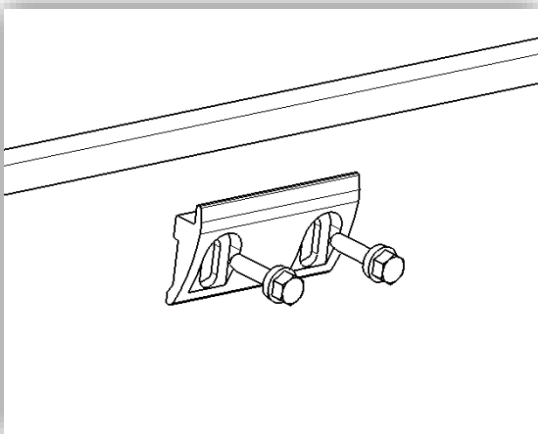

19. If the roller shutter do not runs smoothly, you can follow below steps: (as the picture shows)

a. Put some lubricating oil on slot part of side rails.

