




CANOPY INSTALLATION INSTRUCTIONS

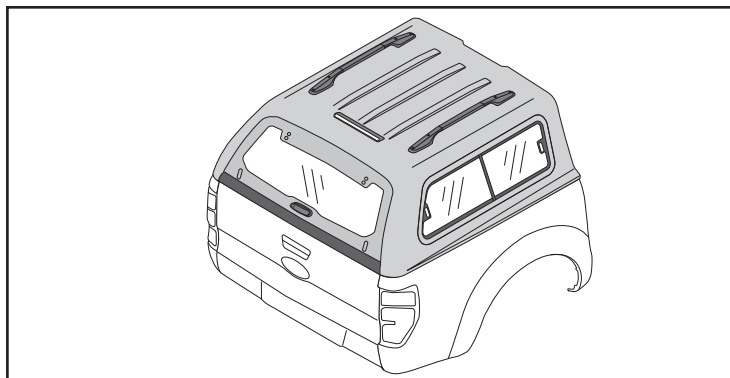


Caution for installation

Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.


Product name : MAXTOP III FORD RANGER DBC 2012
 Model name : FORD T6 DBC 2012
 Inst. number : L04-0198

Component parts








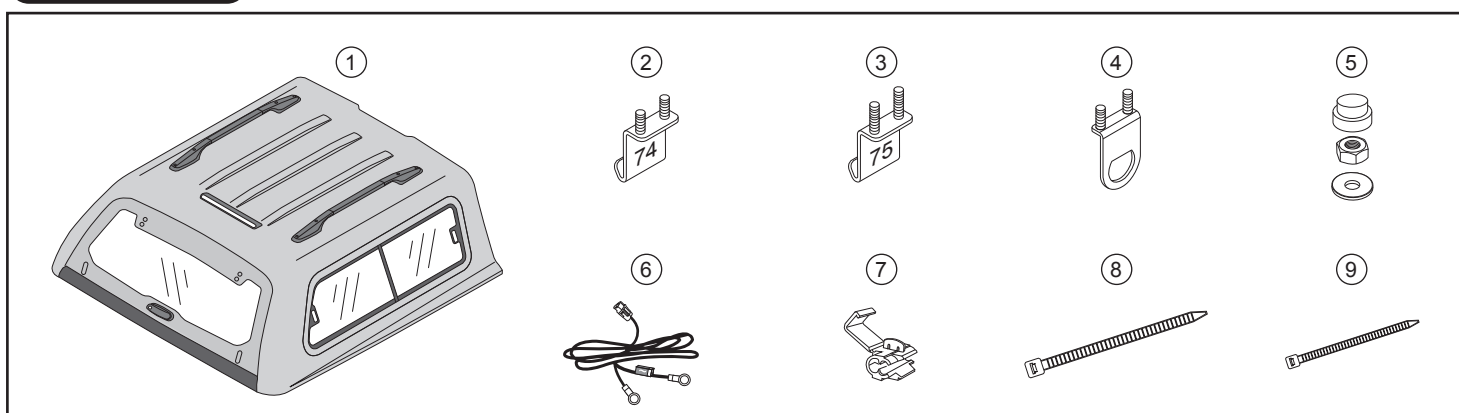


No.	Part Name	Q'ty
1.	Canopy shell set	1 Set
2.	Plate rail lock FB : 74	2 Pcs.
3.	Plate rail lock FB : 75	2 Pcs.
4.	Plate rail lock FL	4 Pcs.
5.	Plastic cap nut, Hex nut M8, Plain washer M8x25	8 Sets
6.	Front harness set	1 Set
7.	Tab	1 Pc.
8.	Cable tie 24"	3 Pcs.
9.	Cable tie 8"	10 Pcs.

Tools used

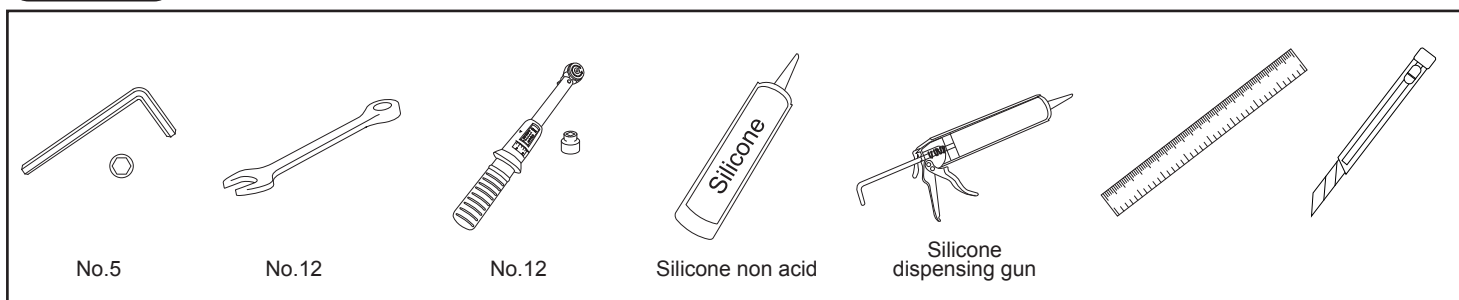

Instruction procedure (without bedliner)

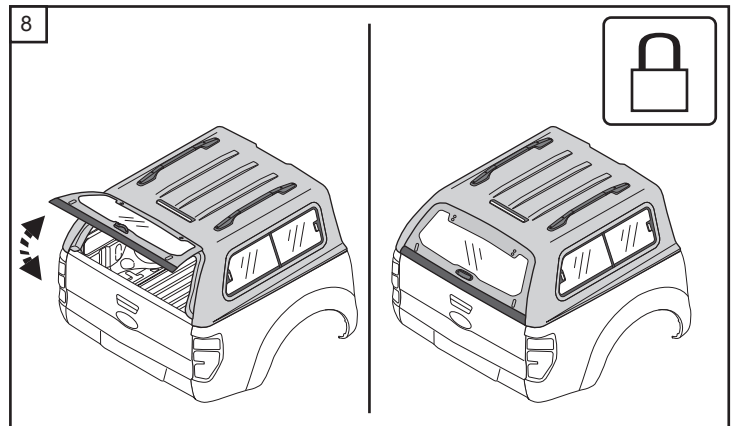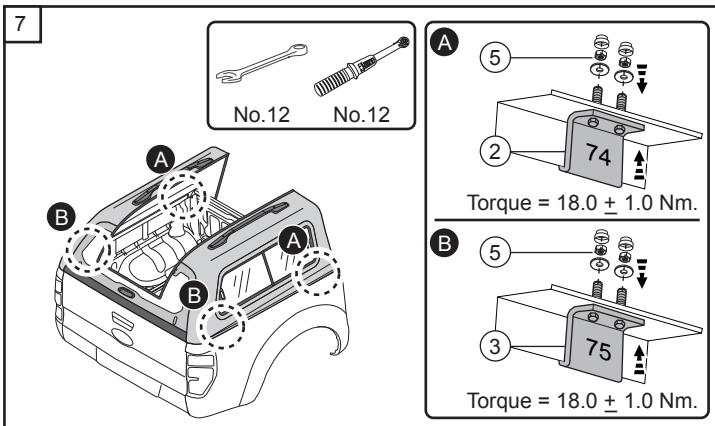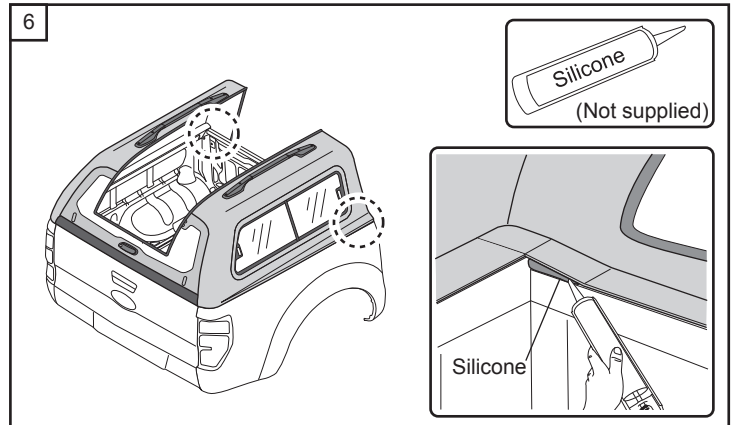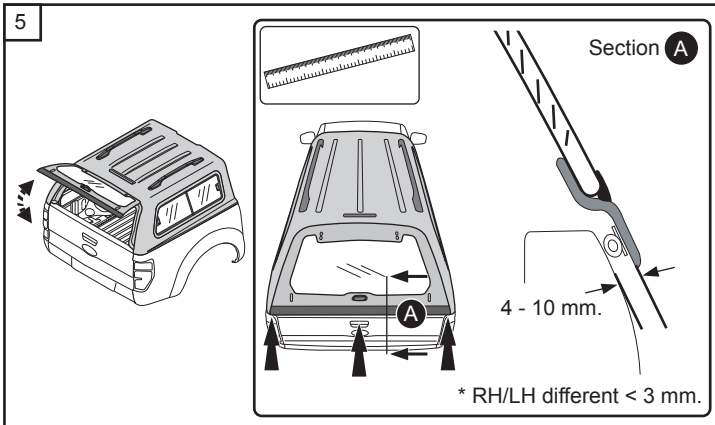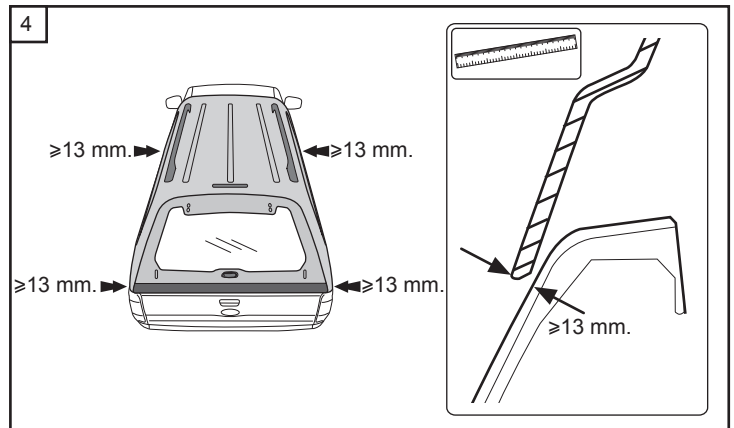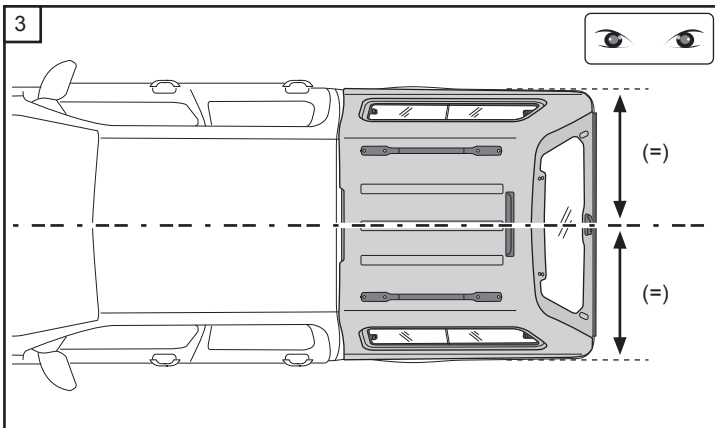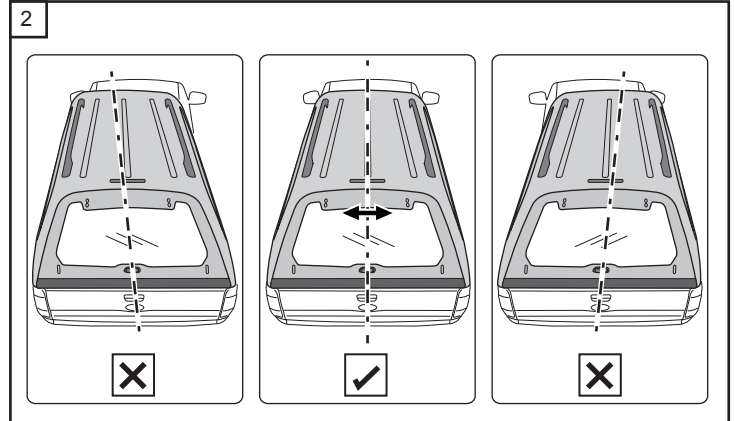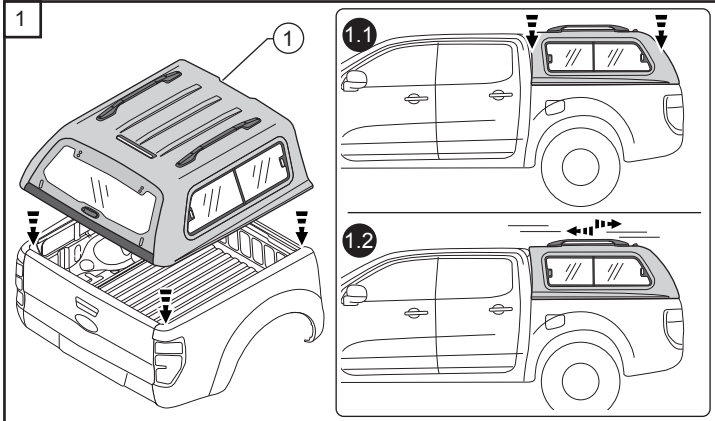

Instruction procedure (with bedliner)

1

No.5

2

No.12 No.12

Torque = 9.0 ± 1.0 Nm.

3

3.1 3.2

4




5

6







≥ 8 mm. ≥ 8 mm. ≥ 8 mm. ≥ 8 mm.

≥ 8 mm.

Instruction procedure (with bedliner)

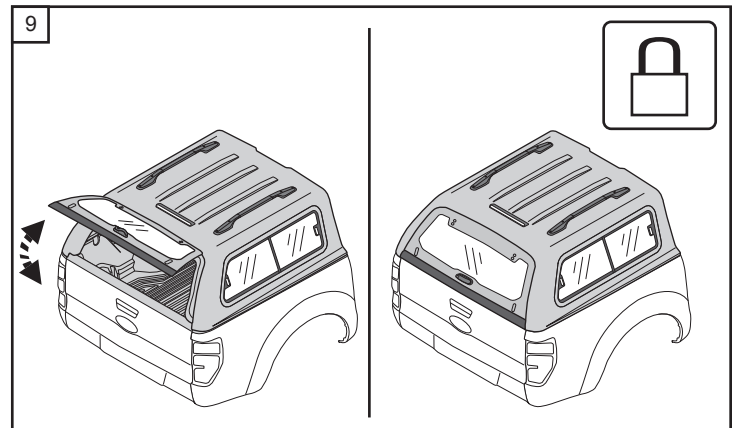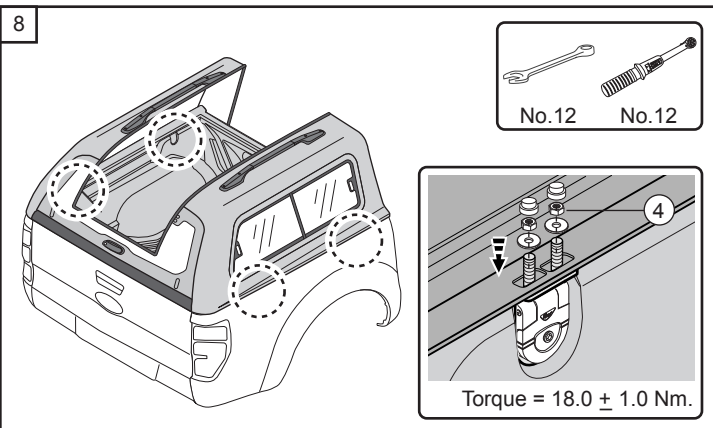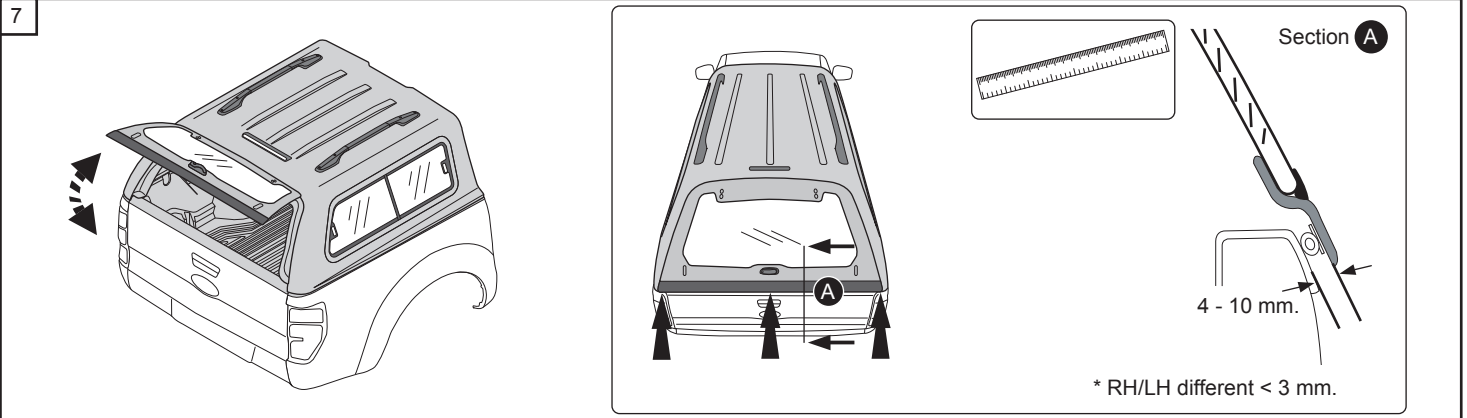

Instruction procedure (Cord set)

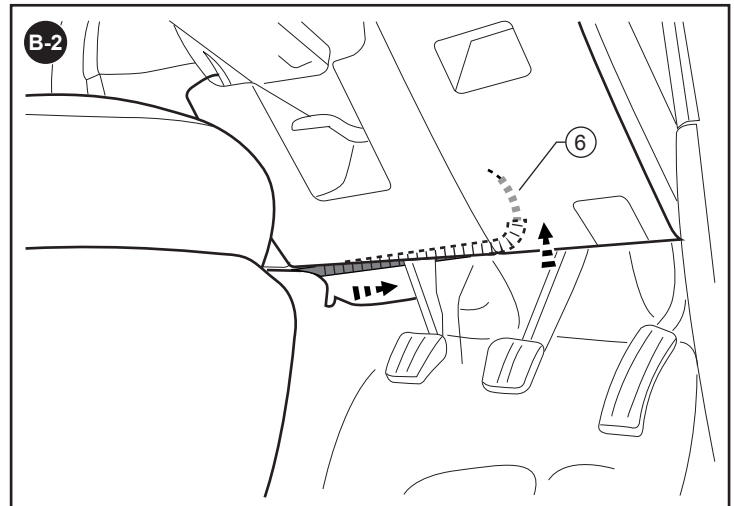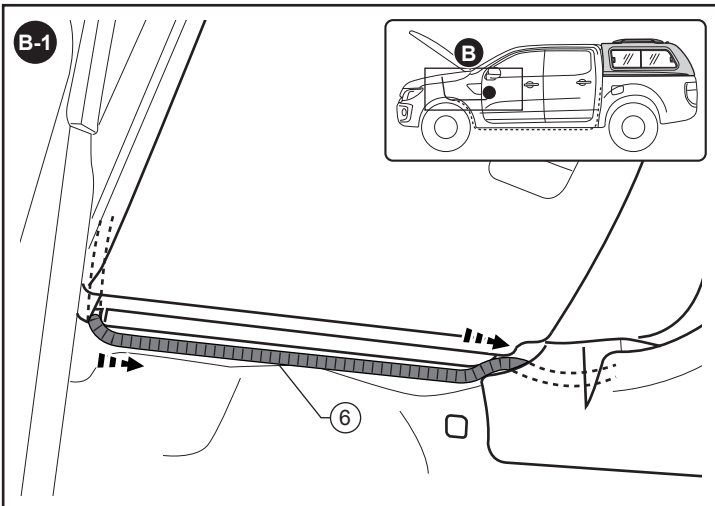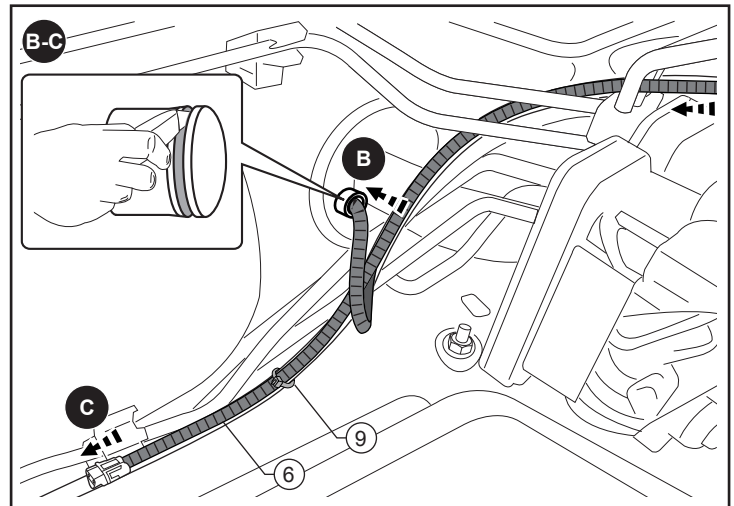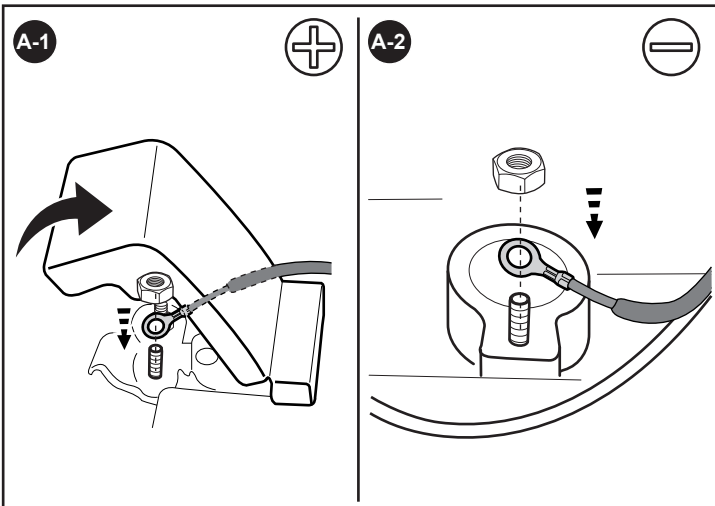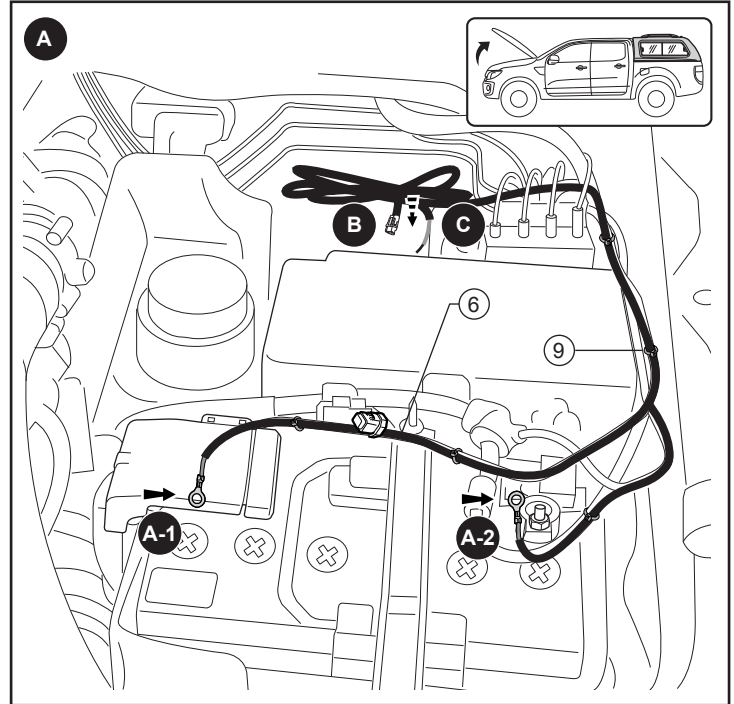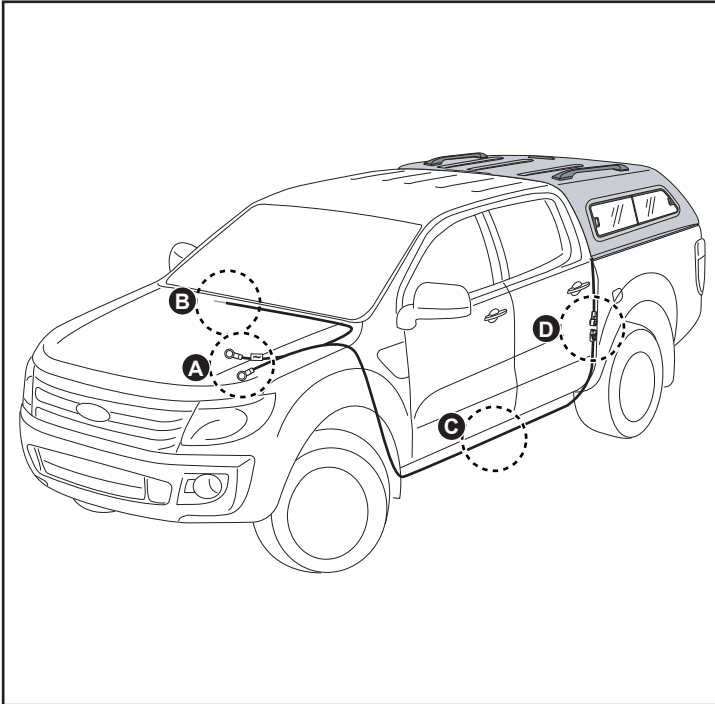

Instruction procedure (Cord set)

